# Kubota B2320 Series Cab

\*\* Shown with optional equipment



### **Kubota B2320 Series Cab**

This ROPS cab is designed and built to fit the Kubota B2320, B2620, and B2920.

Designed and Built by:

Tektite Manufacturing Inc: 24157 Hwy 3 P.O. Box 639 Winkler, MB R6W 4A8 Canada PH: 204-331-3463 Fax: 204-331-4159 sales@tektite.ca

One year standard product warranty provided by Tektite.



# Caution

- \*\* Please read installation instructions and follow all safety statements before attempting operating this ROPS product.
- \*\* A copy of this operator manual should be kept with the machine operating manuals.
- \*\* If this manual is lost, please contact your local Kubota dealer for a replacement.

Vahida Madal

Tektite Manufacturing Incorporated thanks you for purchasing a Kubota B2320 series ROPS cab! Tektite has worked very hard to design and build this ROPS product and we hope that it provides you with many years of ROPS protection.

Tektite's ROPS products are designed to provide safe and dependable service during operation when they are properly maintained according to the instructions. Please read this operator manual carefully before using this ROPS product.

The photos/illustrations provided in this manual may not provide all the detail needed, and are for reference only.

All directions provided are from the reference point of the tractor seat facing the steering wheel. All left and right references are from this view point.

For reference, please fill in the information below. This will assist your dealer in providing service for this ROPS. It is advisable that this information be provided to your insurance company as well in the event that the tractor is lost or damaged.

| verlicle Model.     | <br> |  |
|---------------------|------|--|
| ROPS Serial Number: | <br> |  |
| Date of Purchase:   | <br> |  |
| Dealer Name:        |      |  |

# **Limited Warranty**

Tektite Manufacturing Inc. (Tektite) warrants to the original purchaser (the "Claimant"), that Tektite products will be free from defective materials or workmanship, under normal use and service, for a period of (1) full year (or 1500 hours, whichever is less) from the original invoice date. Tektite's liability under this Limited Warranty is limited to the repair or (at the discretion of Tektite) the replacement of those components of its products, which were manufactured by Tektite that are defective in materials or workmanship. Tektite shall have no liability under this Limited Warranty unless Tektite is notified of the defect during the stated Warranty Period.

All returns require a Returned Material Authorization Number (RMA#). Warranty claims must be submitted to Tektite at 1-204-331-3463 prior to written authorization. All warranty work not pre-authorized by Tektite will not be covered by this warranty agreement. Claimant must arrange shipping of the returned and repaired or replaced product or component from Tektite plant in Winkler, Manitoba at the Claimant's own risk and expense. Tektite must receive all returns within (30) days of issuance of a RMA#. Limitations and Exclusions: Tektite has no responsibility to a Claimant under this Limited Warranty or on any other basis for any of the following:

- a) defects caused, in whole or in part, by accident or misuse, negligence or failure to maintain the product or component;
- b) products or components sold to a customer on an "as is" basis;
- c) wiper blades, light bulbs, fuses, clear vinyl or other consumables;
- d) glass where the point of failure has not been preserved intact and delivered to Tektite for analysis of the cause of the failure;
- e) products or components which have been modified after shipping from Tektite to its customer;
- f) transportation charges for returned, repaired or replacement items;
- g) defects that are subject of an Tektite initiated recall where the Claimant fails to comply with the terms of the recall notice that comes to the attention of the Claimant;
- h) components of Tektite products that are manufactured by third parties (Tektite's only obligation in relation to such components shall be to accord to the Claimant the benefit of any transferable warranty accorded to Tektite by third party manufacturer);
- i) defects in workmanship or materials in products or components that are repaired or replaced by Tektite unless Tektite is notified of the new defect within the Warranty Period that applied to the original product or component that has been repaired or replaced;
- j) defects that result, in whole or in part, from inadequate engineering or specifications provided to Tektite by its customer;
- k) any actual or alleged deficiency in technical or engineering services or advice provided by Tektite to its customer whether provided for valuable consideration or otherwise;
- I) consequential damages, or any other damages whether foreseeable or not, resulting from the defect or any delay in remedying the defect; and
- m) any breach or alleged breach of any implied warranty of merchantability or fitness for particular purpose of use;
- n) defects or part failure due to misuse or failure to follow recommended cab installation procedures;
- o) travel expenses, including mileage.

This Limited Warranty expresses the entire obligation of Tektite, its officers, directors, agents and employees, to its customer or any Claimant in respect of any defect in workmanship, or materials of any product or component sold or manufactured by Tektite whether on grounds of breach of contract, negligence or other tortuous liability, breach of express or implied warranty or other basis in law of any jurisdiction.

Acceptance by a customer of delivery of products of Tektite constitutes acceptance of this Limited Warranty in lieu of all other warranties express or implied including without limitation all implied warranties of merchantability or fitness for particular purpose or use and constitutes acceptance by customer of the exclusions and limitations of the liability of Tektite set out above.

\*Labor rate fixed at a maximum of \$75.00 per hour (U.S.) and \$75.00 per hour (CDN) based on Tektite determination of applicable hours.

# **Safety Precautions**

# Safety First

Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use the features that are on this cab/ROPS.

**Danger:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury.

**Warning:** Indicates a potentially hazardous situation which, if not avoided, may result in death or serious injury.

**Caution:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

**Important:** Indicates that cab or property damage may result if instructions are not carefully followed.

**NOTE:** All products are designed to give safe, dependable service if they are operated and maintained according to instructions. It is the owner's responsibility to be certain anyone operating this product reads this manual, and all other applicable manuals, to become familiar with this cab and all safety precautions. Failure to do so could result in serious personal injury or cab damage. If you have any questions, consult your dealer. Read and understand this manual before operation.

**NOTE:** A safe operator is the best assurance against accidents. All operators, no matter how experienced they may be, should read this operator manual and all other related manuals before attempting to operate features in this cab/ROPS and operate the base tractor. Please read the following section and pay particular attention to all safety recommendations contained in this manual and those labelled on the cab and on the tractor.

## **General Safety**

- 1. Never let an unqualified or untrained driver operate the tractor.
- 2. Keep a fire extinguisher, with ABC rating securely fastened in the ROPS. Maintain it and be familiar with its use.
- 3. Do not carry passengers.
- 4. Never operate the tractor in a closed building for a prolonged period. Ensure adequate ventilation is present, as engine exhaust fumes are poisonous and can kill.
- 5. Always keep sleeves, jackets or other loose clothing relatively tight and belted. Loose clothing may catch on moving parts and result in severe personal injury or death.
- 6. Provide a first-aid kit, securely attached inside of the ROPS for use in case of accident.
- 7. Never jump from the tractor. There is a danger of tripping or falling on protruding parts.
- 8. Use steps and hand holds when mounting and dismounting the tractor, or for servicing components too high to reach from the ground.
- 9. When seated in the ROPS, fasten seat belt before starting the engine. A proper seat belt must be worn at all times when using a ROPS.
- 10. Safety devices and shields are intended to protect operators from injury or death. Under no circumstances should they be modified, disabled or removed.

# **Operating Safety**

- 1. Always operate the tractor controls while sitting in the operator's seat.
- 2. Lock seat in position and buckle seat belt before operating the tractor.
- 3. Avoid abrupt sharp turns at high speeds.
- 4. On sloped terrain, do not make sharp turns as machine stability could be compromised.
- 5. Operate the tractor smoothly, avoid abrupt starts and stops.
- 6. Keep all shields in place when operating the tractor.
- 7. Do not operate the tractor when you are tired, sick, or impaired.
- 8. Never operate the tractor in confined areas; visibility next to the tractor is reduced. Injury to bystanders or damage to the ROPS or equipment may result.

### Safety

Carefully review the procedures given in this manual and the tractor operator's manual with all operators annually. It is important that all operators become familiar with, and follow safety precautions. Operating instructions must be given to everyone using the tractor before operation and at least once yearly thereafter in compliance with OSHA Regulations 1928.57 (United States).

# Safe Operation on Rough Terrain

- 1. Drive the tractor slowly on hillsides and curves to eliminate the danger of tipping. Avoid slopes which are too steep for safe operation. Avoid sharp uphill turns.
- 2. Always drive slowly enough over rough ground or obstructions. Drive at speeds slows enough to ensure your safety.
- 3. When driving out of a ditch, gully, or up a steep hillside, engage the clutch slowly. Avoid sharp uphill turns.
- 4. When descending steep grades, select a sufficiently low gear to maintain control with minimum use of braking.
- 5. Use caution when driving near the edge of a ditch or gully. It may cave in, causing the tractor to roll over.
- 6. Be alert when operating near trees, slopes and around obstructions. Tree branches can cause damage to ROPS components.

# **Maintenance Safety**

- 1. Remove mud, crop residue, chains, and tools from steps and operator's platform. They may interfere with pedal operation or entry/exit from tractor.
- 2. When servicing components are too high to reach from the ground use steps and handholds. Do not use fenders or shields that are not designed as steps.

### **Safe Highway Operation**

- 1. Before operating the tractor on, or near, public roadways check with your local authorities for any local regulations that will affect you.
- 2. Equip towed implements with slow moving vehicle (SMV) signs when traveling on public roads.
- 3. Install additional lights on implement rear to safeguard against rear end collisions.
- 4. Use hazard warning flashers as required by law when transporting or driving on public roads. If the tractor had warning flashers removed when mounting the ROPS, they must be replaced prior to operation on public roads.
- 5. Keep to the right, yielding right-of-way traffic, especially if pulling implements. Pull off the road and stop to allow motorists to pass. Drive on the road shoulder, if permitted by law.
- 6. Use extreme caution when pulling heavy loads at road speeds. Avoid hard application of the tractor brakes at high speed.
- 7. Always drive slowly near curbs, approaches or ditches.
- 8. If equipped, ensure headlights are aligned so they will not blind the operator's of oncoming vehicles. If the tractor is not equipped with turn signals and law requires them, install them prior to operating on or near public roads.

9. Use your turn signals, checking for traffic well in advance of turning. If the tractor is not equipped with turn signals and law requires them, install them prior to operating on or near public roads.

### **Safety Decals**

- 1. Keep decals clean. Remove dirt with a wet clean cloth when necessary.
- 2. Replace safety decals if destroyed, missing, painted over or unreadable. If any safety decals are covered or obscured when the ROPS is mounted, it is recommended that you purchase replacement decals from the tractor manufacturer. Mount them in a readable location at, or near, their original location before operating the tractor.
- 3. New ROPS decals and tractor decals are available from your tractor dealer.

# **ROPS Safety**

- 1. Install the ROPS in accordance with Tektite mounting instructions. Failure to do so may affect the ROPS ability to withstand a roll over.
- 2. If the ROPS is subjected to alteration, structural damage or involved in an over turn accident, the entire structure must be replaced. Failure to do so may result in injury or death in the event of a roll over.
- 3. If the tractor in not equipped with seat belts, purchase approved seat belts from the tractor manufacturer or Tektite prior to operating the tractor.
- 4. Always fasten seat belts prior to operating the tractor.
- 5. Always operate the tractor from the operator's seat.
- 6. Remove mud, crop residue, chains and tools from steps and operator's platform. They may interfere with pedal operation or entry/exit from the tractor.
- 7. Remove all loose chains, tools, and equipment from the operator's platform. Failure to do so may cause injury or death in the event of a roll over.
- 8. Do not install the ROPS on a tractor model that the ROPS is not designated for (compatible tractor designations are printed on the ROPS serial number plate). The ROPS is designed specifically for individual models to ensure ROPS requirements will be met. Installing the ROPS on a non designated tractor may result in injury or death.

### **Emergency Exits**


This ROPS cab has 2 exits, which may be used in an emergency: left and right side doors.

# **Operating Instructions**

### **Important**

The following section locates, identifies and briefly describes the functions of all cab controls. All operators should familiarize themselves with control location and function prior to operating the tractor. Failure to do so may result in unsafe operation of the tractor and possible injury or death to operators and bystanders.

There are two switch plates located in the headliner. The following switches are available and their functionality is described.

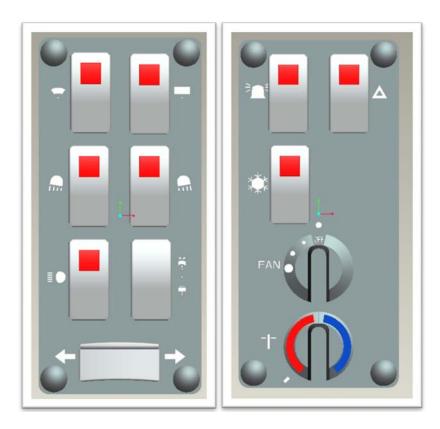

# **Left Switch Plate**

# 1. Front Wiper Rocker Switch (standard)

Low position: Off High position: On

Note: indicator light activates when wiper is on.

# 2. Rear Wiper Rocker Switch (optional)

Low position: Off

High position: On

Note: indicator light activates when wiper is on.

# 3. Front Work Light Rocker Switch (optional)

Low position: Off High position: On

Note: indicator light activates when work lights are on.

# 4. Rear Work Light Rocker Switch (optional)

Low position: Off High position: On

Note: indicator light activates when work light is on.

# 5. Head Lights Rocker Switch (optional)

Low position: Off High position: On

Note: indicator light activates when head lights are on.

# 6. Front and Rear Washer Rocker Switch (optional)

Low position: Momentary – On Rear Washer

Middle position: Off

High position: Momentary – On Front Washer

# 7. Turn Signal Rocker Switch (optional)

Left position: On Middle position: Off Right position: On

# **Right Switch Plate**

# 1. Beacon Rocker Switch (standard)

Low position: Off High position: On

Note: indicator light activates when beacon is on.

# 2. Hazard Rocker Switch (optional)

Low position: Off High position: On

Note: indicator light activates when 4-way flashers are on.

# 3. Air Conditioner Rocker Switch (optional)

Low position: Off High position: On

Note: indicator light activates when air conditioner is on.

## 4. Fan Rotary Switch (optional)

Indicator mark above switch indicates whether fan is operational or not.

# 5. Temperature Control Rotary Switch (optional)

Indicator mark at lower left corner indicates current temperature setting. Rotate to increase heat output or to decrease heat output of heating system. When air conditioner is being used, it is recommended that the switch be at maximum cooling position.

## **Cab Circuit Protection**

The Tektite ROPS cab is wired to provide maximum protection against accidental battery rundown and circuit overload. A relay in the cab is ignition activated and prevents the operator from accidentally leaving fan motors, lights on after turning the tractor off and leaving for the day. A circuit breaker is provided to prevent the cab electrical components from drawing more power than they should be able to from a dead short. The cab electrical components are also fused individually, and the fuse block is located in the headliner, directly above the door opening on the left side. Locate the 3" snap cap, and with a small flat screw driver you can remove the cap to examine the fuses provided. A decal on the fuse block indicates which fuse is for which electrical option.

# After your ROPS Cab has been installed:


Before starting a tractor equipped with a Tektite ROPS cab:

- 1. Clear the operator platform of all tools. Tools left in or around the ROPS and tractor can cause operator interference which could lead to bodily injury and/or damage the machine.
- 2. Inspect the ROPS and tractor to ensure all bolts are tight and re-tighten if required.
- 3. Ensure that all pedals, levers, and controls have adequate clearance for normal operation.
- 4. Ensure that all electrical components of both the ROPS and tractor operate normally.
- 5. Ensure your door latches properly onto the striker pin. Immediately after installation, the ROPS frame may flex slightly from installation, and the door latch will need to be re-aligned for proper operation. Loosen the striker pin, striker mounting plate and door latch as necessary to get a proper alignment of the door striker.

### Service Parts Breakdowns:

Following are parts breakdowns for components that may require service parts replacement during the life of the ROPS. If you require replacement parts, please contact the dealer that you purchased the ROPS from and indicate which parts you require.

| Index | Service Part # | File Name                  | Description             | Qty |
|-------|----------------|----------------------------|-------------------------|-----|
| 1     | A00-0007       | FAN-SWITCH                 | 4-Position Fan Switch   | 1   |
| 2     | A00-0053       | TEKT-0017                  | Temp Control Knob       | 1   |
| 3     | A00-0054       | TEKT-0018                  | Fan Speed Control Knob  | 1   |
| 4     | A00-0055       | TEKT-0019                  | Fir Tree Fastener       | 4   |
| 5     | A00-0065       | TEKT-ASM-005               | On-Off Switch w/Lens    | 3   |
| 6     | A00-0068       | RIGHT-CAB-SWITCHPLATE      | Right Switchplate       | 1   |
| 7     | A00-0069       | RIGHT-CAB-SWITCHPLATE-DECA | Right Switchplate Decal | 1   |

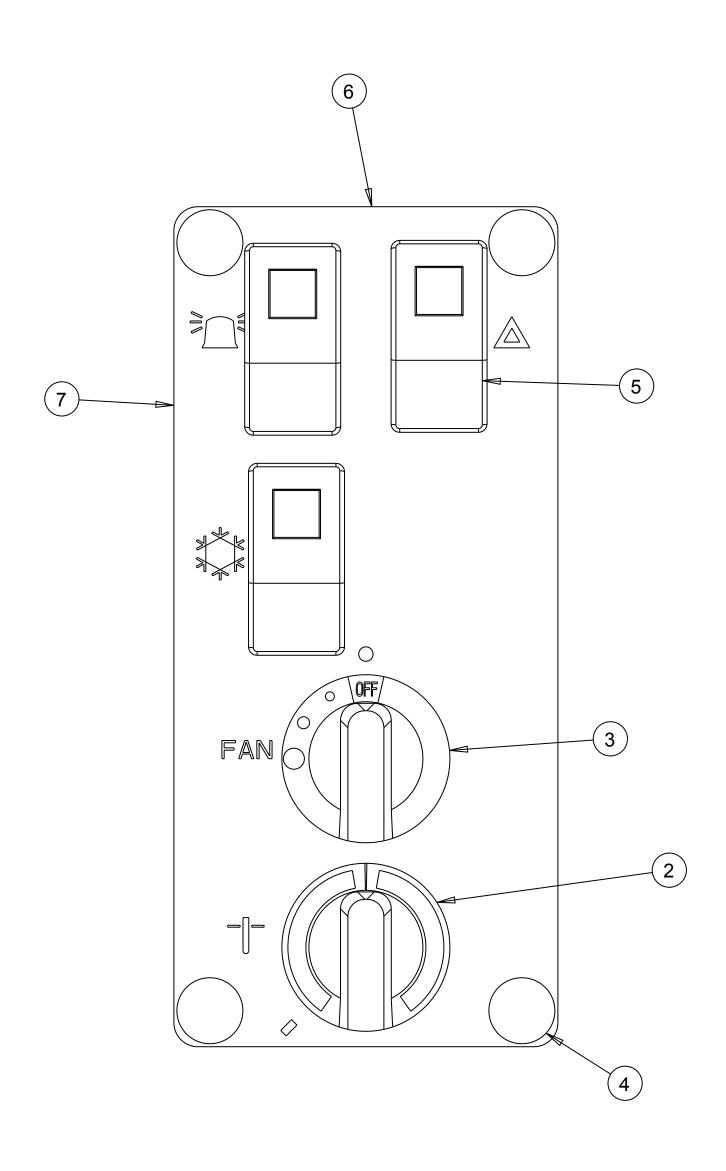


### SCALE 1.000

| Tolerances: Unless otherwise                |
|---|
| specified                                   |
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0$ ° |

|               |            |              | Tektite Manufacturing Inc.<br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|---|
| Req'd:        | CNC:       | Description: |   |
| -             |            | Cab S        | Switch Plate Right  |
| Drawn By:     | Date:      | Units:       | File Name:  |
| Daryl Furkalo | 2009-03-09 | Imp.         | RIGHT-SWITCH-PLATE-ASM  |
| Checked By:   | Date:      | Size:        |   |
|               |            | В            |   |

| <u> </u> | T              | T =                        |                           |     |
|----------|----------------|----------------------------|---------------------------|-----|
| Index    | Service Part # | File Name                  | Description               | Qty |
| 1        | A00-0055       | TEKT-0019                  | Fir Tree Fastener         | 4   |
| 2        | A00-0063       | LEFT-CAB-SWITCHPLATE       | Left Switchplate          | 1   |
| 3        | A00-0064       | LEFT-CAB-SWITCHPLATE-DECAL | Left Switchplate Decal    | 1   |
| 4        | A00-0065       | TEKT-ASM-005               | On-Off Switch w/Lens      | 5   |
| 5        | A00-0066       | TEKT-ASM-006               | On-Off-On Rocker No Lens  | 1   |
| 6        | A00-0067       | TEKT-ASM-007               | Mom-Off-Mom Rocker Switch | 1   |

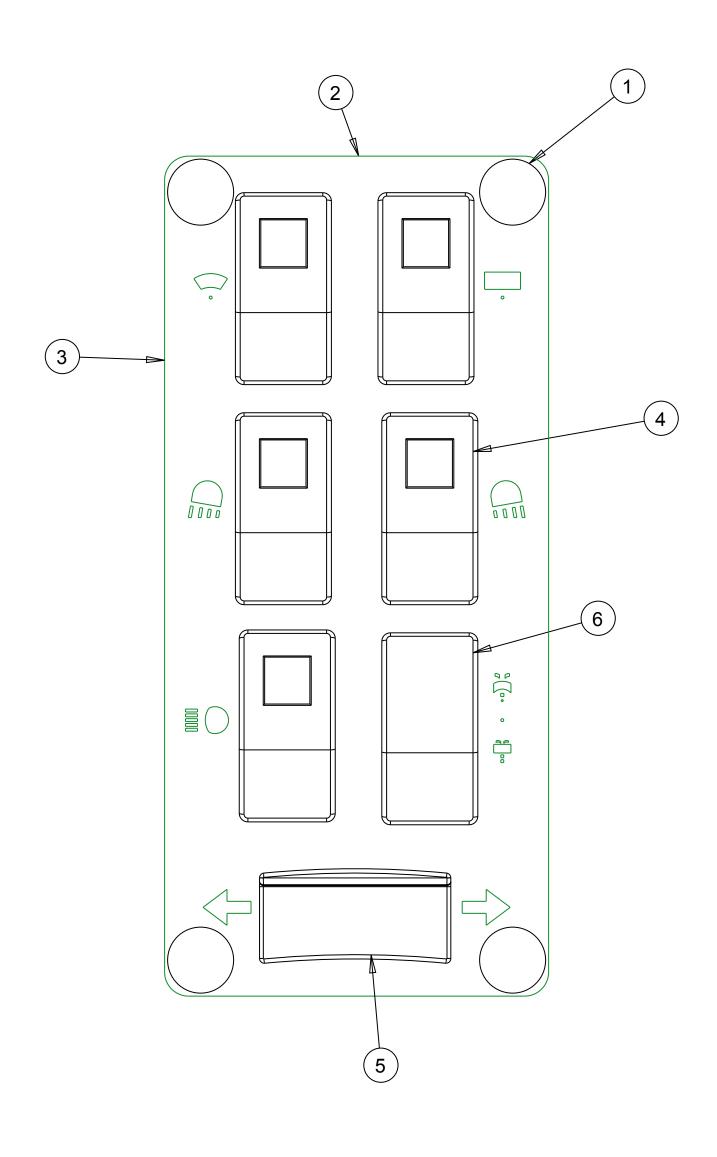


# SCALE 1.000

| Tolerand<br>Unless otherw<br>specified | es:<br>vise |
|--|-------------|
| X.X = ± 1/16                           | "           |
| Angular = ±                            | 1.0°        |

|               |            |              | <b>Tektite Manufact</b><br>24157 Hwy 3, Box 639, Winkle | curing Inc.<br>r MB, R6W 4A8, Canada |
|---------------|------------|--------------|---|--------------------------------------|
| Req'd:        | CNC:       | Description: |   |                                      |
|               |            | Opera        | or Manual Switch Plate Left                             |                                      |
| Drawn By:     | Date:      | Units:       | le Name:  |                                      |
| Daryl Furkalo | 2009-03-09 | Imp.         | left-switchplate-asm                                    |                                      |
| Checked By:   | Date:      | Size:        |   |                                      |
|               |            | В            |   |                                      |


| Index | Service Part # | File Name           | Description                   | Qty |
|-------|----------------|---------------------|-------------------------------|-----|
| 1     | A00-0076       | TEKT-0026           | 1/4" Panel Nut                | 3   |
| 2     | A00-0089       | TEKT-0059           | Heater Core                   | 1   |
| 3     | A00-0090       | TEKT-0065           | Upper Blower Housing          | 1   |
| 4     | A00-0091       | TEKT-0066           | Blower Housing Lower          | 1   |
| 5     | A00-0097       | TEKT-0082           | Water Valve                   | 1   |
| 6     | A00-0100       | FLANGE_BOLT_1-4X1-2 | Flange Bolt, 1/4" x 1/2", YD  | 3   |
| 7     | A00-0157       | TEKT-ASM-015        | Bottom Heater Shroud Weldment | 1   |
| 8     | A00-0158       | TEKT-ASM-014        | Top Heater Shroud Weldment    | 1   |
| 9     | A00-0159       | TEKT-0067           | Rotary Squirrel Cage          | 2   |
| 10    | A00-0162       | TEKT-0081           | Fan Motor                     | 1   |

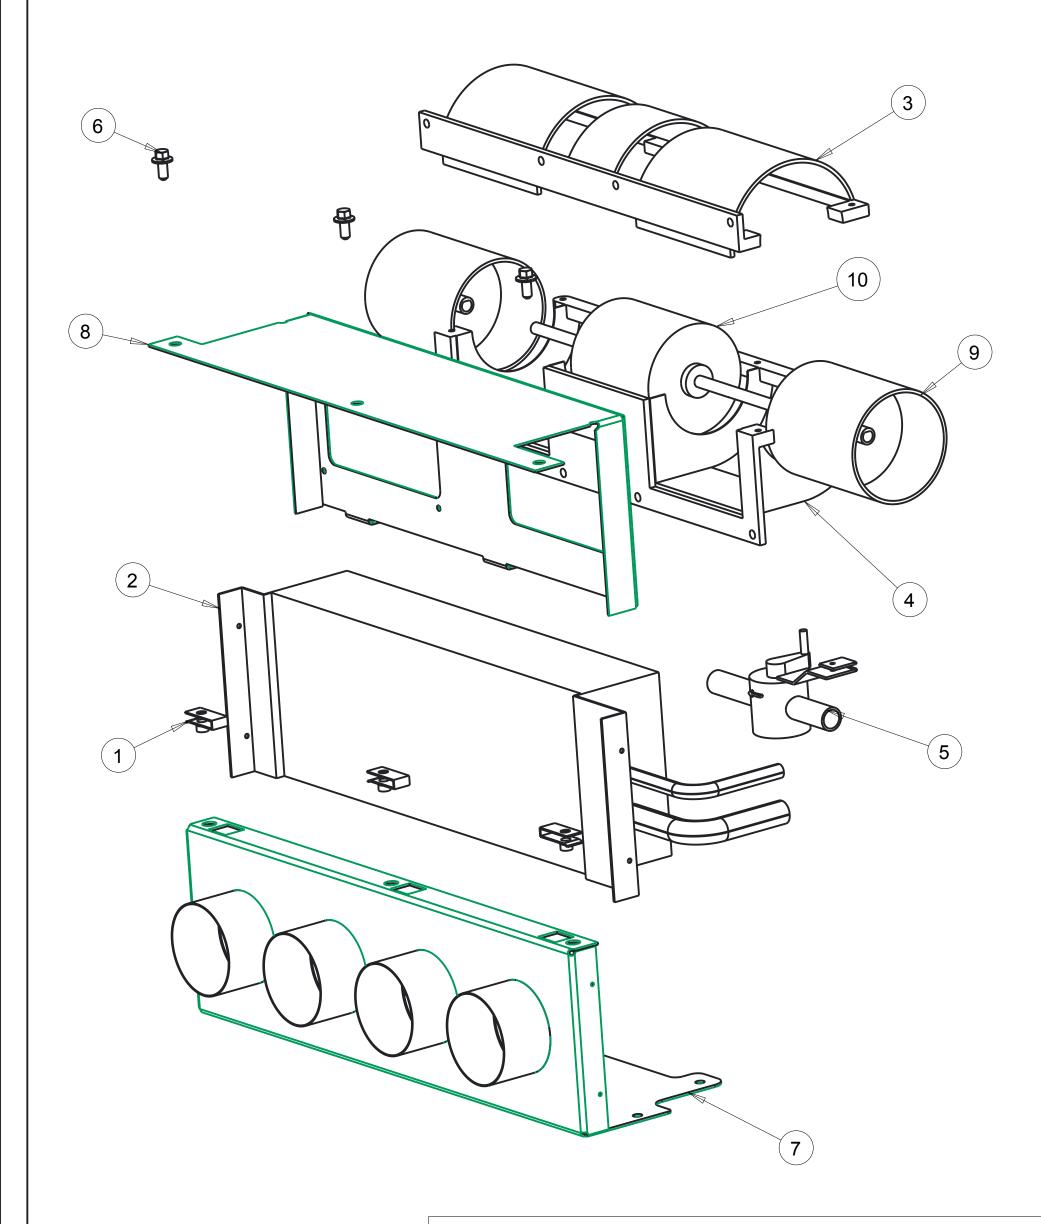

| Tolerances:                                       |
|---|
| Unless otherwise specified                        |
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0^{\circ}$ |

|               |            |              | Tektite Manufacturing Inc.<br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|---|
| Req'd:        | CNC:       | Description: |   |
| -             |            | Tekt         | ite In-House Heater Assembly  |
| Drawn By:     | Date:      | Units:       | File Name:  |
| Daryl Furkalo | 2013-02-01 | Imp.         | TEKT-ASM-016_OP   |
| Checked By:   | Date:      | Size:        |   |
|               |            | B            |   |


| Index | Service Part # | File Name              | Description                | Qty |
|-------|----------------|------------------------|----------------------------|-----|
| 1     | A00-0006       | TEKT-0074              | Cabin Air Filter           | 2   |
| 2     | A00-0016       | TEKT-0075              | Domelight LED              | 1   |
| 3     | A00-0017       | 305-1002               | Panto Mount Plate          | 1   |
| 4     | A00-0025       | BALL-LOUVER            | 2 1/2" Ball Louver         | 4   |
| 5     | A00-0026       | OSCILLATING-FAN        | Oscillating Fan            | 1   |
| 6     | A00-0038       | TEKT-0076              | 3" Plug Button             | 1   |
| 7     | A00-0055       | TEKT-0019              | Fir Tree Fastener          | 2   |
| 8     | A00-0070       | REID-KBP-262-KBP-265   | Knob, Knurled, 1/4"        | 6   |
| 9     | A00-0071       | LEFT-SWITCHPLATE-ASM   | Left Switchplate Assembly  | 1   |
| 10    | A00-0072       | RIGHT-SWITCH-PLATE-ASM | Right Switchplate Assembly | 1   |
| 11    | A00-0073       | FILTER-COVER           | Filter Cover               | 3   |
| 12    | A00-0074       | TEKT-ASM-004           | Fuse Block Assembly        | 1   |
| 13    | A00-0075       | WWJ-MOTOR-ASM          | Front Wiper Motor, WWJ     | 1   |
| 14    | A00-0076       | TEKT-0026              | 1/4" Panel Nut             | 6   |
| 15    | A00-0081       | KUF2880-HEADLINER-REV1 | Headliner                  | 1   |
| 16    | A00-0082       | KUF2880-049            | Headliner Upholstery       | 1   |
| 17    | A00-0083       | KUF2880-060            | Front Filter Upholstery    | 1   |

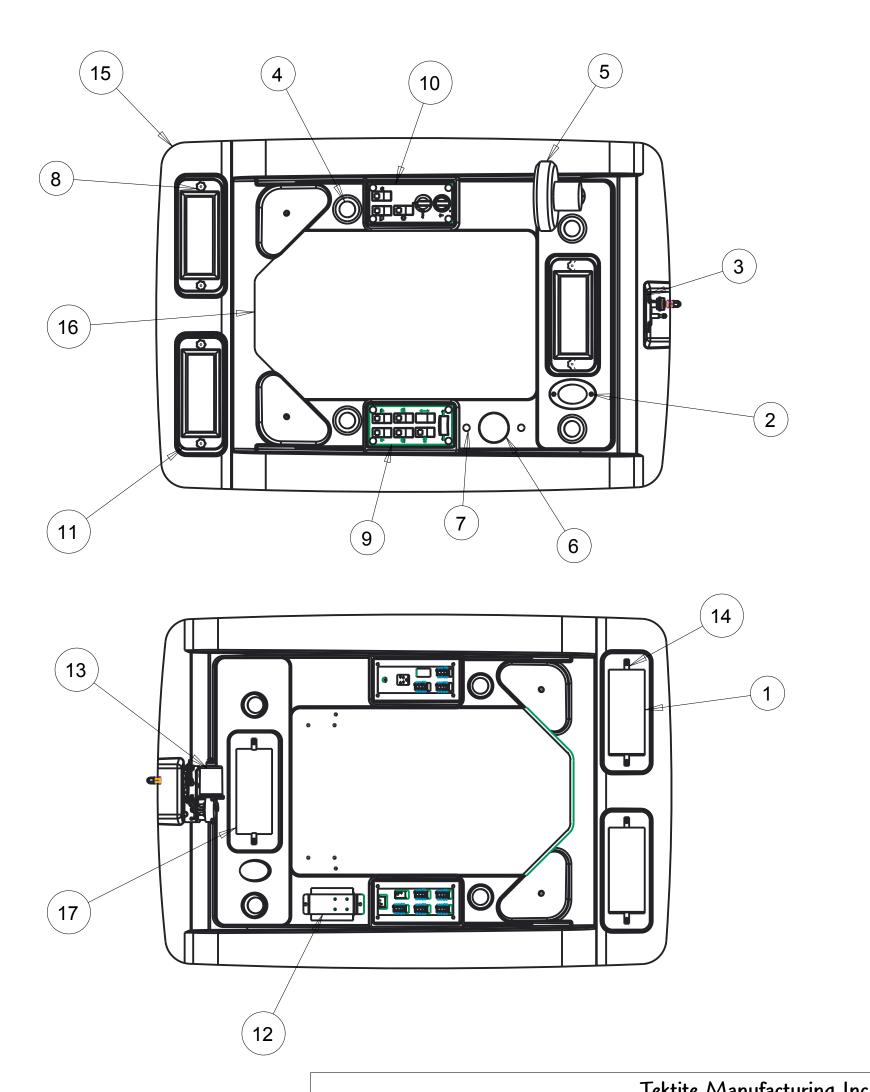

| Tolerances:<br>Unless otherwise<br>specified      |
|---|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0^{\circ}$ |

|               |            |              | T <b>ektite /Vlanufacturing Inc.</b><br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Cana | ıda |
|---------------|------------|--------------|---|-----|
| Req'd:        | CNC:       | Description: |   |     |
|               |            | Head         | dliner Assembly Breakdown   |     |
| Drawn By:     | Date:      | Units:       | File Name:  |     |
| Daryl Furkalo | 2013-02-01 | Imp.         | KUF2880-HEADLINER-ASM   |     |
| Checked By:   | Date:      | Size:        |   |     |
|               |            | В            |   |     |


| Index | Service Part # | File Name         | Description                        | Qty |
|-------|----------------|-------------------|------------------------------------|-----|
| 1     | A00-0008       | TEKT-0077         | Front Turn Signal Light LED, Amber | 2   |
| 2     | A00-0009       | TEKT-0079         | Oval LED Light Grommet             | 2   |
| 3     | A00-0010       | TEKT-0078         | Round Grommet, LED Light           | 2   |
| 4     | A00-0011       | TEKT-0080         | Round Turn Light                   | 2   |
| 5     | A00-0078       | RED-DOT-CONDENSOR | Red Dot Condensor 77R1602          | 1   |
| 6     | K04-0001       | KUF2880-ROOF      | Roof                               | 1   |

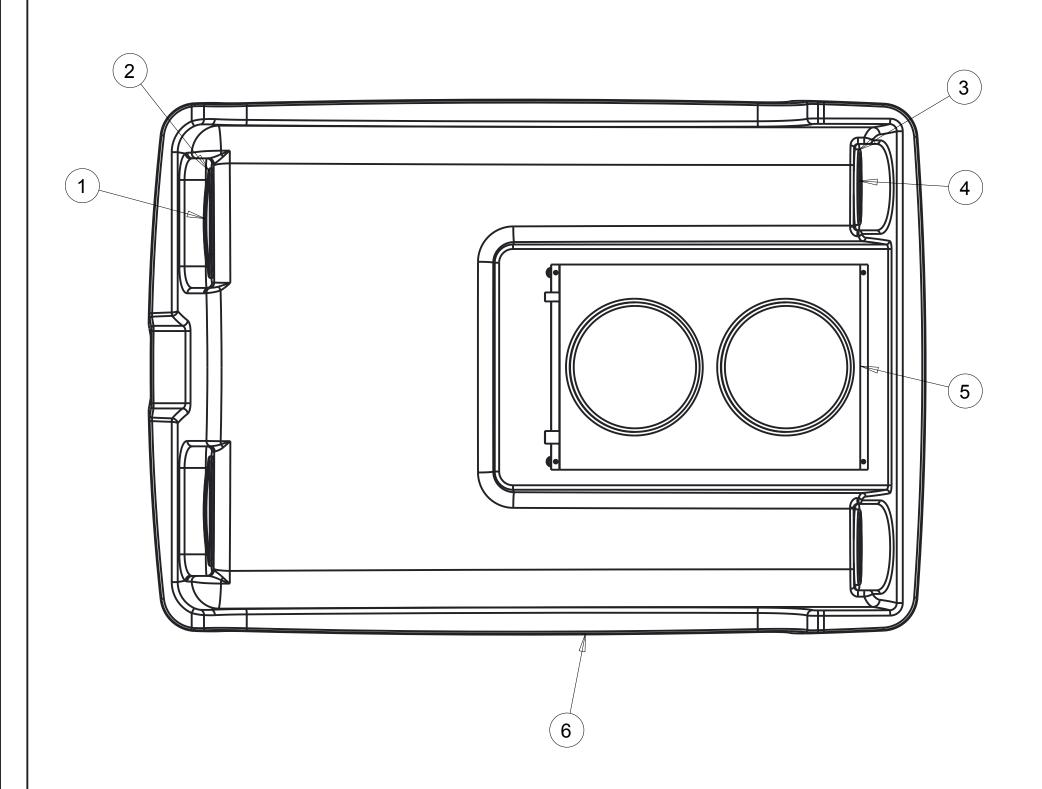

| Tolerances:<br>Unless otherwise<br>specified      |
|---|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0^{\circ}$ |

|  |               |       |            | <b>Tektite Manufacturing Inc.</b> 24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|--|---------------|-------|------------|---|
| Req'd: CNC: Description:                       |               |       |            |   |
| 1  | Roof Assembly |       |            |   |
| Drawn By:                                      | Date:         |       | File Name: |   |
| Daryl Furkalo 2013-02-01 Imp. KUF2880-ROOF-ASM |               |       |            | D-ROOF-ASM  |
| Checked By:                                    | Date:         | Size: |            |   |
|  |               | B     |            |   |


| Index | Service Part # | File Name            | Description                   | Qty |
|-------|----------------|----------------------|-------------------------------|-----|
| 1     | A00-0013       | TEKT-0009            | 5MM Bushing                   | 8   |
| 2     | A00-0019       | STEP-BOLT1-4X1       | Step Bolt, 1/4" x 1", MB      | 4   |
| 3     | A00-0021       | FLANGE-NUT-1-4       | Flange Nut, 1/4", YD          | 4   |
| 4     | A00-0046       | TEKT-ASM-002R        | Side Window Hinge Right       | 2   |
| 5     | A00-0056       | TEKT-0020            | Side Window Latch, L60775     | 1   |
| 6     | A00-0058       | CARRIAGE_BOLT-5-16X1 | Bolt, Carriage, 5/16"x 1", YD | 1   |
| 7     | A00-0059       | FLANGE-NUT-5-16      | Flange Nut, 5/16", YD         | 1   |
| 8     | A00-0087       | TEKT-0028            | Side Window Slider Bracket    | 1   |
| 9     | A00-0119       | WASHER_1-4           | Washer, Flat, 1/4"            | 2   |
| 10    | K04-0003       | KUB2320-024          | Side Window Glass             | 1   |
| 11    | K04-0008       | KUB2320-050          | Side Window Seal              | 1   |

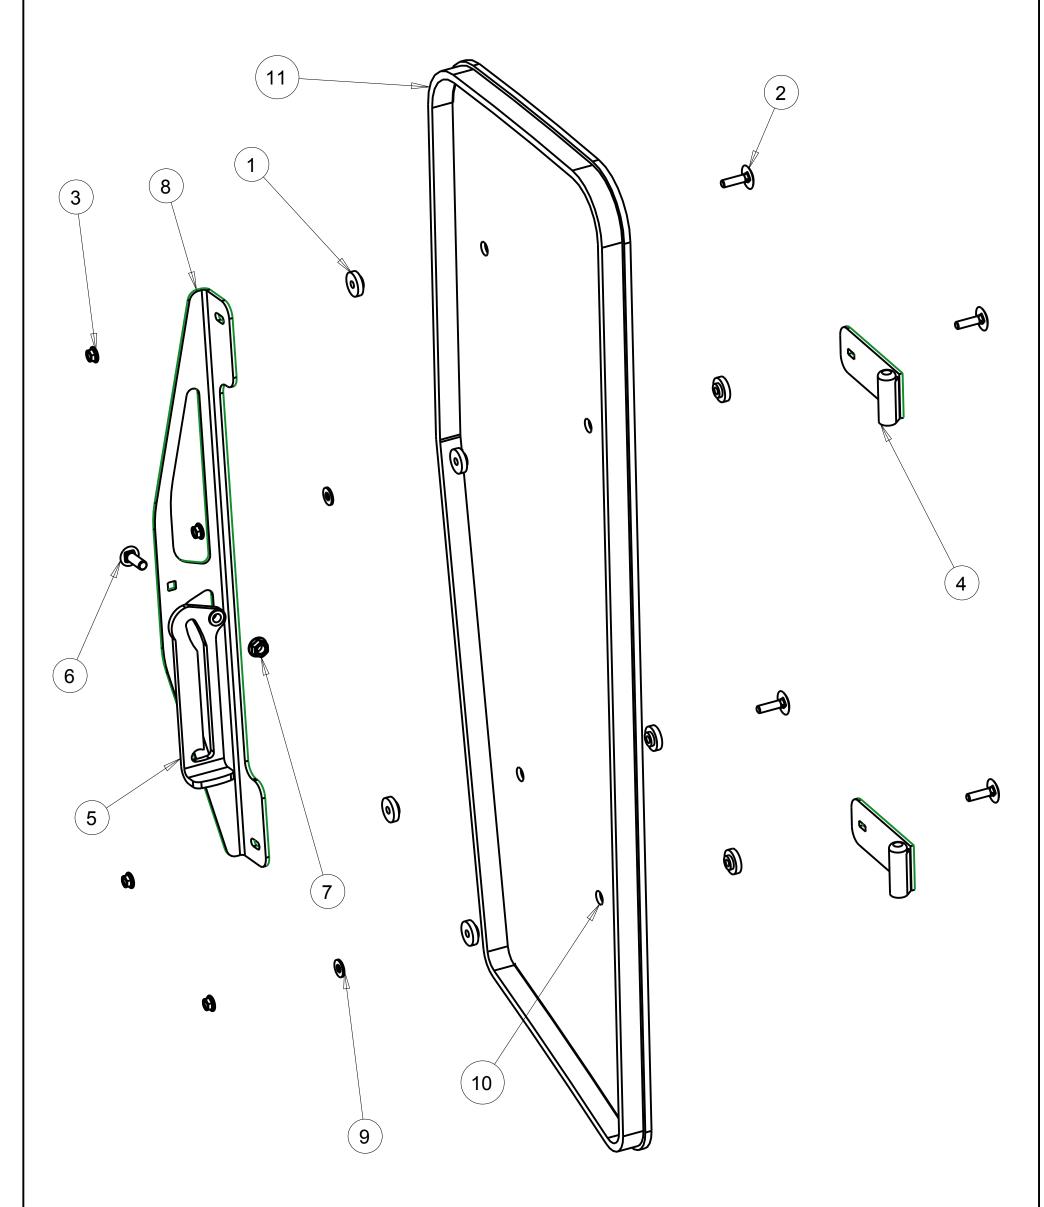

| Tolerances: Unless otherwise                |
|---|
| specified                                   |
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0$ ° |

|               |            |              |            | <b>Tektite Manufacturing Inc.</b> 24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|------------|---|
| Req'd:        | CNC:       | Description: |            |   |
| _             |            | Left         | Side Wir   | ndow Assembly   |
| Drawn By:     | Date:      | Units:       | File Name: |   |
| Daryl Furkalo | 2011-12-03 | Imp.         | KUB2320    | O-ASM-04_OP   |
| Checked By:   | Date:      | Size:        |            |   |
|               |            | В            |            |   |

| Index | Service Part # | File Name            | Description                   | Qty |
|-------|----------------|----------------------|-------------------------------|-----|
| 1     | A00-0013       | TEKT-0009            | 5MM Bushing                   | 8   |
| 2     | A00-0019       | STEP-BOLT1-4X1       | Step Bolt, 1/4" x 1", MB      | 4   |
| 3     | A00-0021       | FLANGE-NUT-1-4       | Flange Nut, 1/4", YD          | 4   |
| 4     | A00-0044       | TEKT-ASM-002         | Side Window Hinge Weldment    | 2   |
| 5     | A00-0057       | TEKT-0020MIR         | Side Window Latch, L60776     | 1   |
| 6     | A00-0058       | CARRIAGE_BOLT-5-16X1 | Bolt, Carriage, 5/16"x 1", YD | 1   |
| 7     | A00-0059       | FLANGE-NUT-5-16      | Flange Nut, 5/16", YD         | 1   |
| 8     | A00-0087       | TEKT-0028            | Side Window Slider Bracket    | 1   |
| 9     | A00-0119       | WASHER_1-4           | Washer, Flat, 1/4"            | 2   |
| 10    | K04-0003       | KUB2320-024          | Side Window Glass             | 1   |
| 11    | K04-0008       | KUB2320-050R         | Side Window Seal              | 1   |

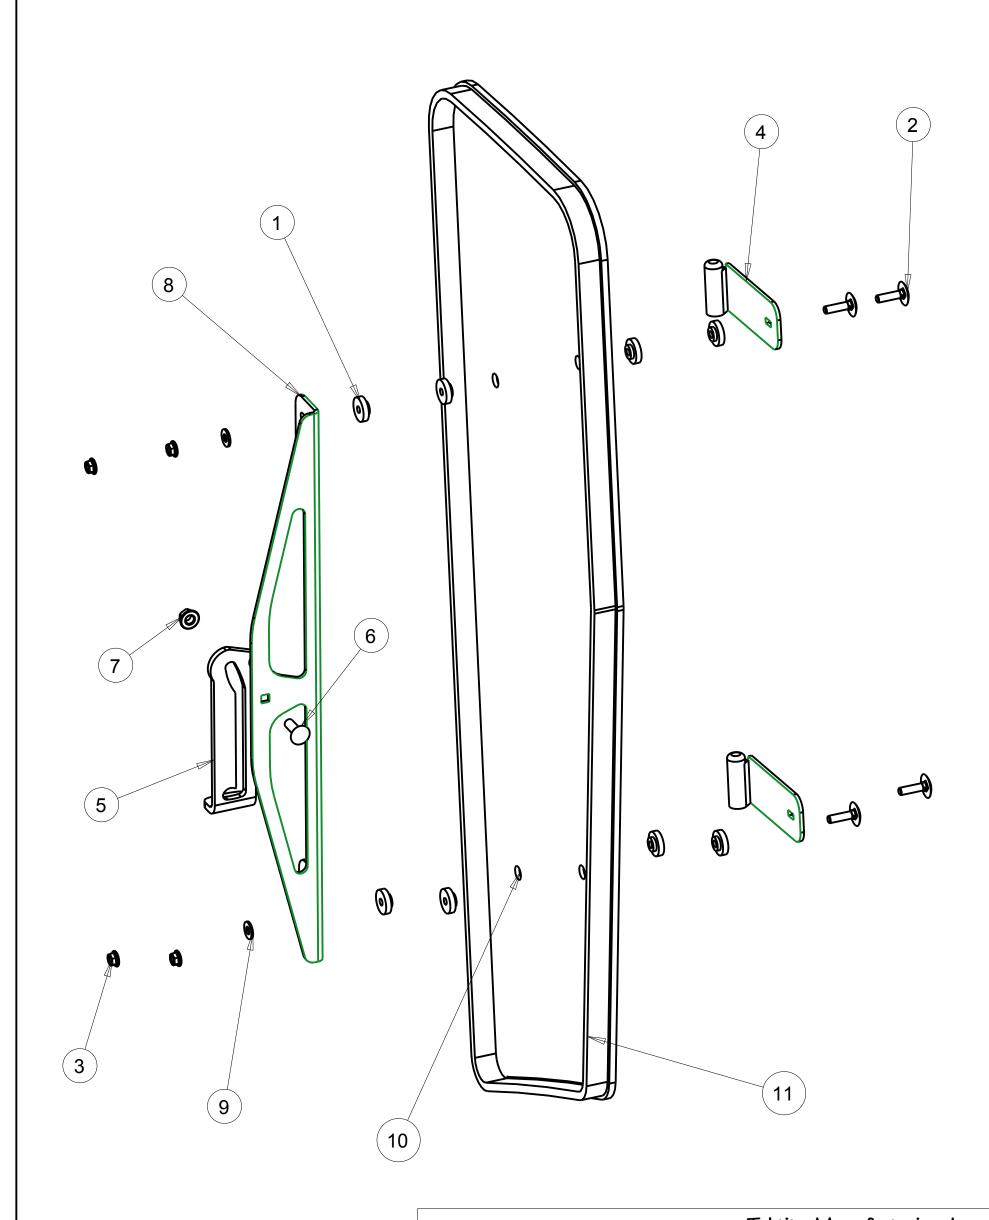

| Tolerances:<br>Unless otherwise<br>specified |
|--|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0$ °  |

|               |                            |              |            | <b>1 ektite Manutacturing Inc.</b> 24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |  |
|---------------|----------------------------|--------------|------------|--|--|
| Req'd:        | CNC:                       | Description: |            |  |  |
|               | Right Side Window Assembly |              |            |  |  |
| Drawn By:     | Date:                      | Units:       | File Name: |  |  |
| Daryl Furkalo | 2011-12-03                 | Imp.         | KUB2320    | D-ASM-O4R_OP   |  |
| Checked By:   | Date:                      | Size:        |            |  |  |
|               |                            | В            |            |  |  |

| Index | Service Part # | File Name            | Description                     | Qty |
|-------|----------------|----------------------|---------------------------------|-----|
| 1     | A00-0001       | DLP-HANDLE           | Outside Push Button Handle      | 1   |
| 2     | A00-0002       | LEFT-LATCH           | Suicide Door Left Latch         | 1   |
| 3     | A00-0013       | TEKT-0009            | 5MM Bushing                     | 17  |
| 4     | A00-0018       | STEP-BOLT1-4X1-1-2   | Step Bolt, 1/4" x 1 1/2", MB    | 3   |
| 5     | A00-0019       | STEP-BOLT1-4X1       | Step Bolt, 1/4" x 1", MB        | 1   |
| 6     | A00-0020       | STEP-BOLT1-4X1-1-4   | Step Bolt, 1/4" x 1 1/4", MB    | 4   |
| 7     | A00-0021       | FLANGE-NUT-1-4       | Flange Nut, 1/4", YD            | 10  |
| 8     | A00-0022       | FLANGE_BOLT_M6X25    | Flange Bolt, M6x25, YD          | 1   |
| 9     | A00-0039       | TEKT-ASM-001         | Left Door Hinge Weldment, Upper | 1   |
| 10    | A00-0040       | REID-RST-160-RST-163 | Grab Handle                     | 1   |
| 11    | A00-0041       | TEKTITE-DECAL        | Tektite Cab Decal - Solid White | 1   |
| 12    | A00-0118       | FLANGE_BOLT_1-4X1    | Flange Bolt, 1/4" x 1", YD      | 2   |
| 13    | A00-0228       | TEKT-ASM-029         | Left Door Hinge Weldment, Lower | 1   |
| 14    | K04-0002       | KUB2320-014          | Door Glass                      | 1   |
| 15    | K04-0006       | KUB2320-049          | Door Weatherstripping           | 1   |
| 16    | K04-0007       | KUB2320-ASM-08       | Left Door Frame Weldment        | 1   |

Tolerances:

Unless otherwise

 $X.X = \pm 1/16$ " Angular =  $\pm 1.0^{\circ}$ 

specified


Drawn By:

Checked By:

Daryl Furkalo

2013-08-07

Date:

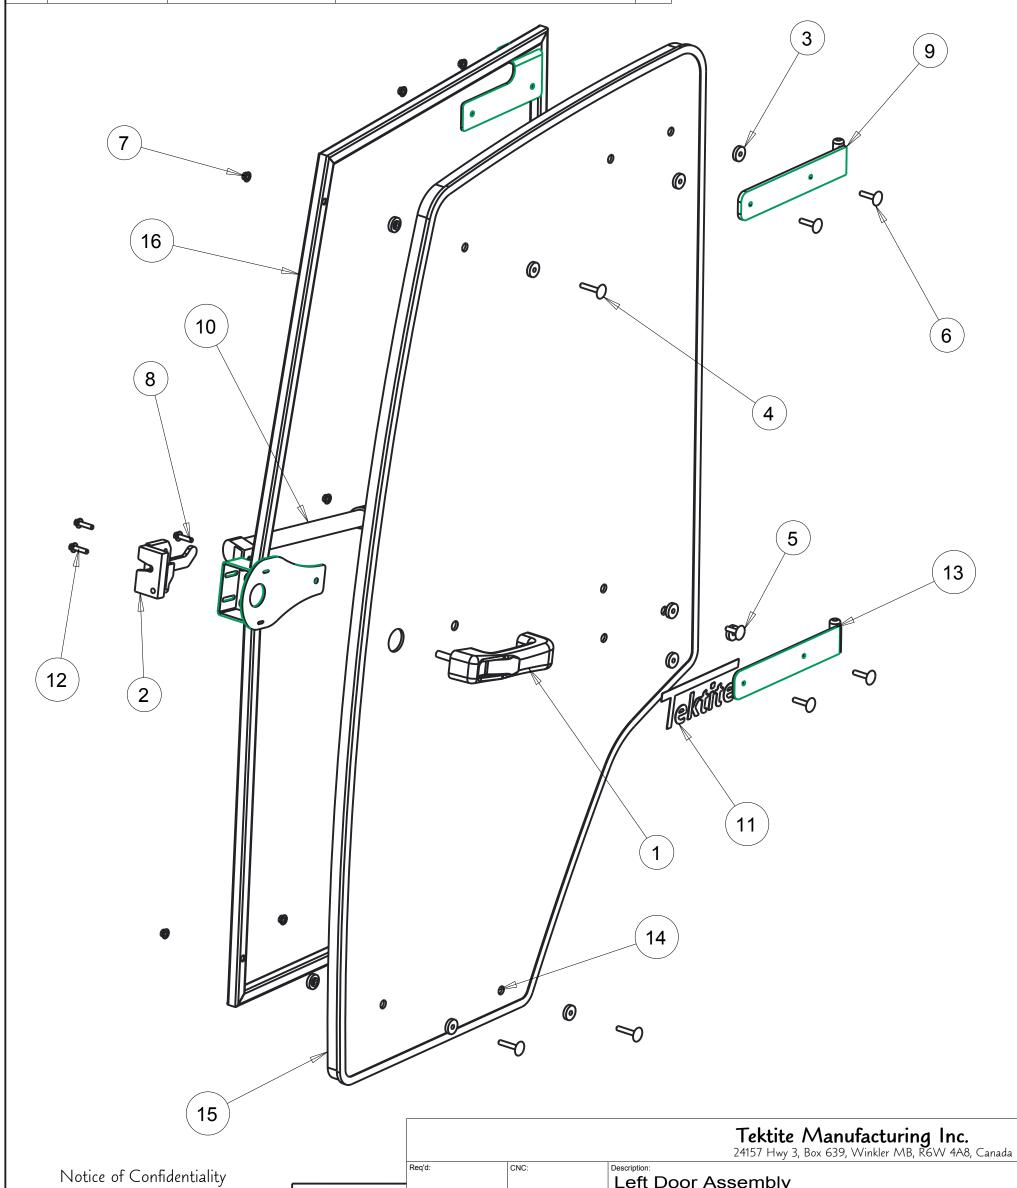


Left Door Assembly

В

Imp. KUB2320-ASM-07\_OP


| Index | Service Part # | File Name            | Description                          | Qty |
|-------|----------------|----------------------|--------------------------------------|-----|
| 1     | A00-0001       | DLP-HANDLE           | Outside Push Button Handle           | 1   |
| 2     | A00-0003       | RIGHT-LATCH          | Suicide Door Right Latch             | 1   |
| 3     | A00-0013       | TEKT-0009            | 5MM Bushing                          | 17  |
| 4     | A00-0018       | STEP-BOLT1-4X1-1-2   | Step Bolt, 1/4" x 1 1/2", MB         | 3   |
| 5     | A00-0019       | STEP-BOLT1-4X1       | Step Bolt, 1/4" x 1", MB             | 1   |
| 6     | A00-0020       | STEP-BOLT1-4X1-1-4   | Step Bolt, 1/4" x 1 1/4", MB         | 4   |
| 7     | A00-0021       | FLANGE-NUT-1-4       | Flange Nut, 1/4", YD                 | 10  |
| 8     | A00-0022       | FLANGE_BOLT_M6X25    | Flange Bolt, M6x25, YD               | 1   |
| 9     | A00-0040       | REID-RST-160-RST-163 | Grab Handle                          | 1   |
| 10    | A00-0041       | TEKTITE-DECAL        | Tektite Cab Decal - Solid White      | 1   |
| 11    | A00-0042       | TEKT-ASM-001R        | Right Cab Door Hinge Weldment, Upper | 1   |
| 12    | A00-0118       | FLANGE_BOLT_1-4X1    | Flange Bolt, 1/4" x 1", YD           | 2   |
| 13    | A00-0229       | TEKT-ASM-029R        | Right Door Hinge Weldment, Lower     | 1   |
| 14    | K04-0002       | KUB2320-014          | Door Glass                           | 1   |
| 15    | K04-0006       | KUB2320-049R         | Door Weatherstripping                | 1   |
| 16    | K04-0011       | KUB2320-ASM-08R      | Right Door Frame Weldment            | 1   |

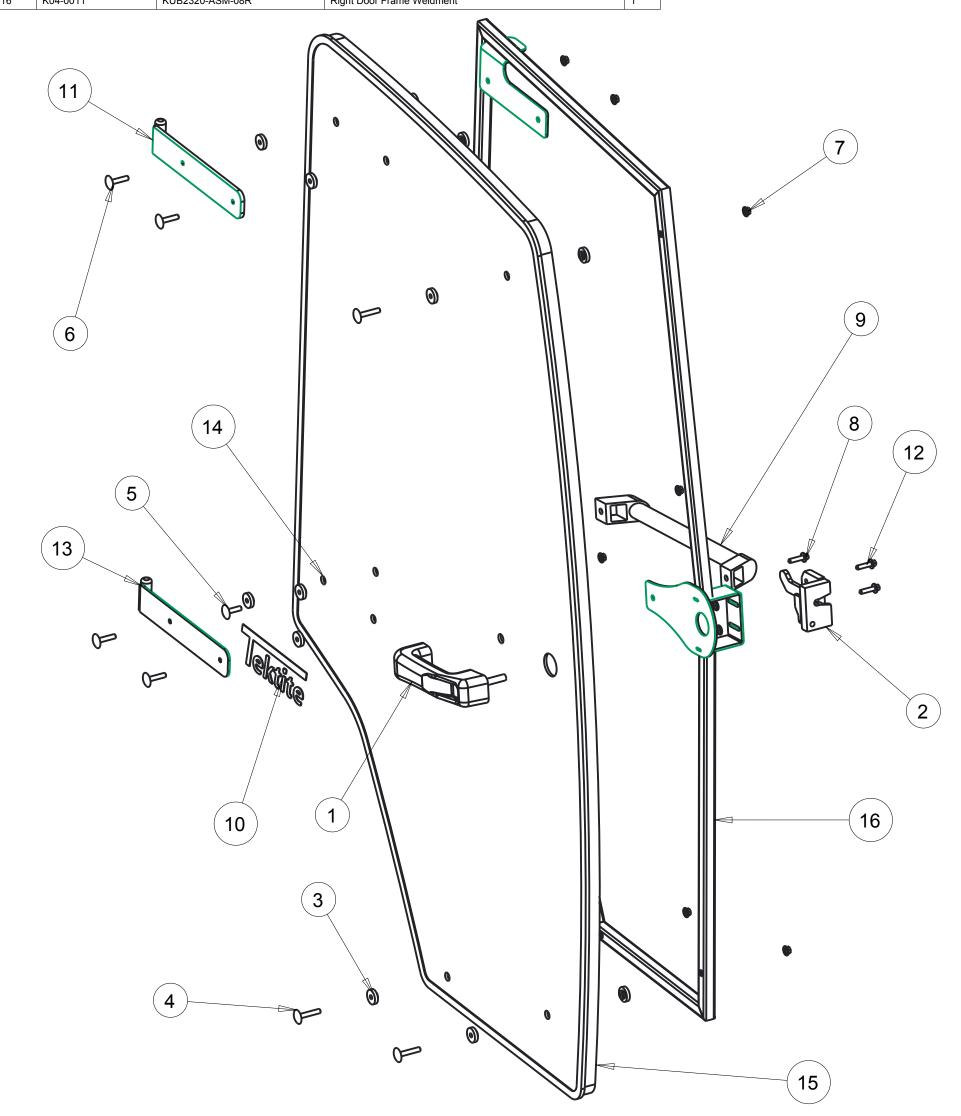

Tolerances: Unless otherwise specified  $X.X = \pm 1/16$ " Angular =  $\pm 1.0^{\circ}$ 

|               |            |              |            | Tektite Manufacturing Inc.<br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|------------|---|
| Req'd:        | CNC:       | Description: |            |   |
| -             |            | Righ         | t Door A   | ssembly   |
| Drawn By:     | Date:      | Units:       | File Name: |   |
| Daryl Furkalo | 2013-08-07 | Imp.         | KUB2320    | o-asm-o7r_op  |
| Checked By:   | Date:      | Size:        |            |   |
|               |            | В            |            |   |


| Index | Service Part # | File Name          | Description                  | Qty |
|-------|----------------|--------------------|------------------------------|-----|
| 1     | A00-0013       | TEKT-0009          | 5MM Bushing                  | 14  |
| 2     | A00-0014       | THICK-BUSHING      | 8MM Bushing                  | 6   |
| 3     | A00-0019       | STEP-BOLT1-4X1     | Step Bolt, 1/4" x 1", MB     | 1   |
| 4     | A00-0020       | STEP-BOLT1-4X1-1-4 | Step Bolt, 1/4" x 1 1/4", MB | 6   |
| 5     | A00-0021       | FLANGE-NUT-1-4     | Flange Nut, 1/4", YD         | 7   |
| 6     | A00-0033       | 315-080            | Rear Wiper Shaft Grommet     | 1   |
| 7     | A00-0043       | WWF-MOTOR          | WWF Wiper Motor, 1" Shaft    | 1   |
| 8     | K04-0005       | KUB2320-031        | Rear Window Glass            | 1   |
| 9     | K04-0009       | KUB2320-051        | Rear Window Seal             | 1   |

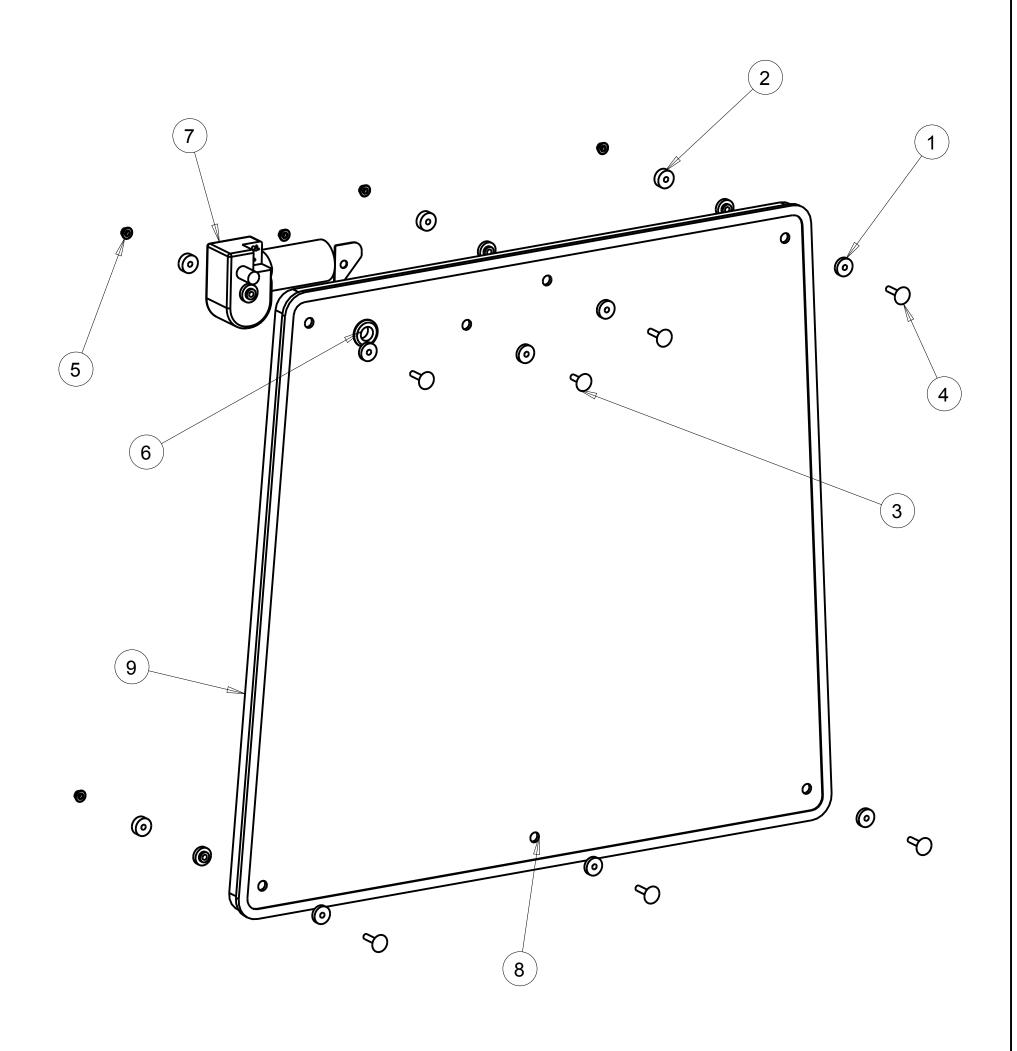

| Tolerances:<br>Unless otherwise<br>specified |
|--|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0$ °  |

|               |            |              | Tektite Manufacturing Inc.<br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|---|
| Req'd:        | CNC:       | Description: |   |
| +             |            | Rear         | r Window Assembly   |
| Drawn By:     | Date:      |              | File Name:  |
| Daryl Furkalo | 2011-12-03 | Imp.         | KUB2320-ASM-10_OP   |
| Checked By:   | Date:      | Size:        |   |
|               |            | В            |   |


| Index | Service Part # | File Name          | Description                  | Qty |
|-------|----------------|--------------------|------------------------------|-----|
| 1     | A00-0013       | TEKT-0009          | 5MM Bushing                  | 12  |
| 2     | A00-0014       | THICK-BUSHING      | 8MM Bushing                  | 6   |
| 3     | A00-0020       | STEP-BOLT1-4X1-1-4 | Step Bolt, 1/4" x 1 1/4", MB | 6   |
| 4     | A00-0021       | FLANGE-NUT-1-4     | Flange Nut, 1/4", YD         | 6   |
| 5     | K04-0004       | KUB2320-028        | Windshield Glass             | 1   |
| 6     | K04-0010       | KUB2320-052        | Front Window Seal            | 1   |

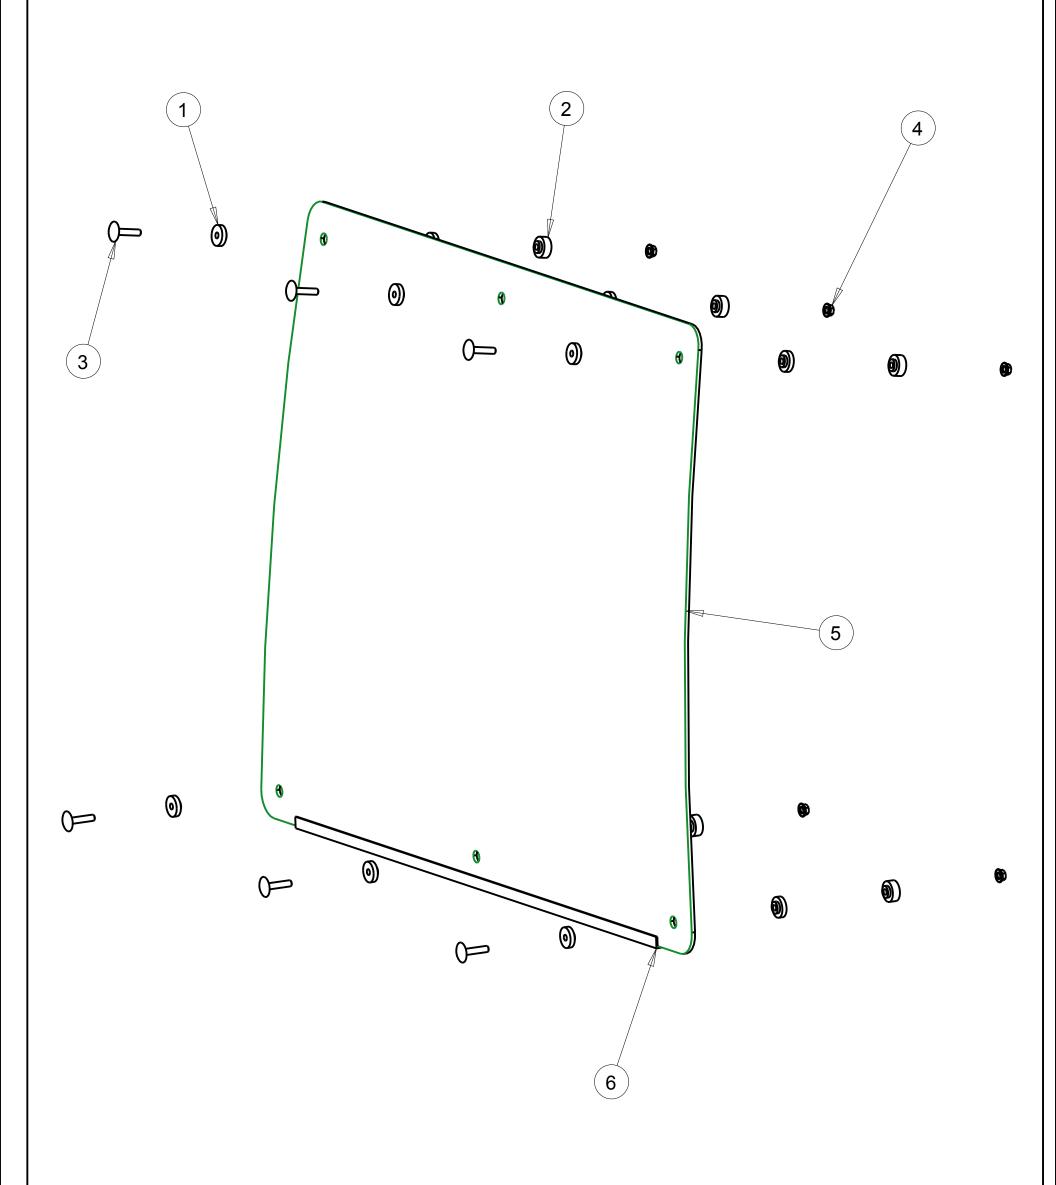

| Tolerances:<br>Unless otherwise<br>specified |
|--|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0$ °  |

|               |            |              |            | <b>Tektite Manufacturing Inc.</b> 24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|------------|---|
| Req'd:        | CNC:       | Description: |            |   |
|               |            | Wind         | dshield A  | Assembly  |
| Drawn By:     | Date:      | Units:       | File Name: |   |
| Daryl Furkalo | 2012-01-03 | Imp.         | KUB2320    | D-ASM-11_OP   |
| Checked By:   | Date:      | Size:        |            |   |
|               |            | В            |            |   |

| Index | Service Part # | File Name       | Description               | Qty |
|-------|----------------|-----------------|---------------------------|-----|
| 1     |                | KUB2320-ASM-12  |                           | 1   |
| 2     | A00-0019       | STEP-BOLT1-4X1  | Step Bolt, 1/4" x 1", MB  | 1   |
| 3     | A00-0021       | FLANGE-NUT-1-4  | Flange Nut, 1/4", YD      | 1   |
| 4     | A00-0043       | WWF-MOTOR       | WWF Wiper Motor, 1" Shaft | 1   |
| 5     | A00-0059       | FLANGE-NUT-5-16 | Flange Nut, 5/16", YD     | 2   |
| 6     | A00-0084       | TEKT-0070       | Gas Shock                 | 2   |
| 7     | A00-0085       | TEKT-0069       | Gas Shock Stud            | 2   |
| 8     | K04-0014       | KUB2320-057     | Front Windshield, AS-1    | 1   |

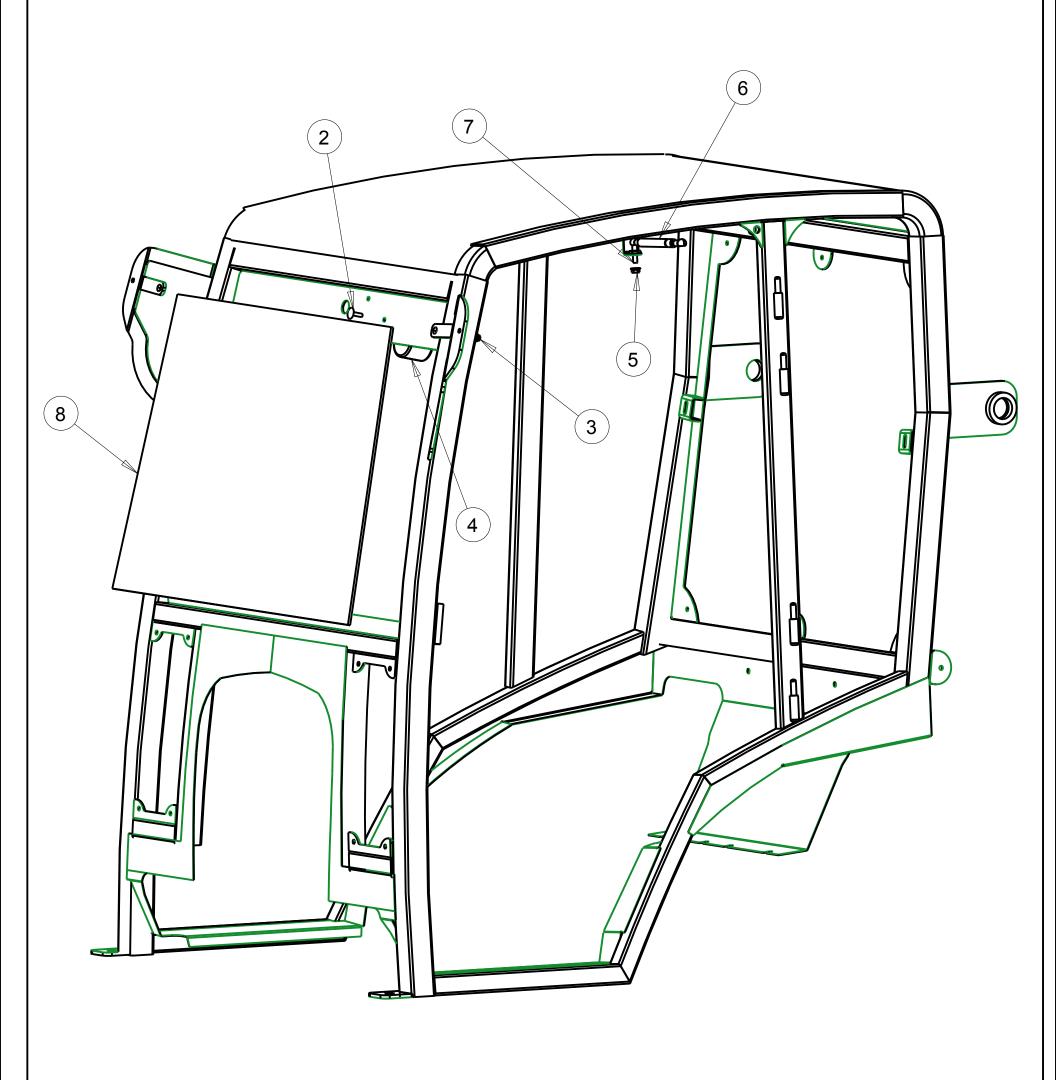

| Tolerances:<br>Unless otherwise<br>specified      |
|---|
| $X.X = \pm 1/16$ "<br>Angular = $\pm 1.0^{\circ}$ |

|               |            |              | Tektite Manufacturing Inc.<br>24157 Hwy 3, Box 639, Winkler MB, R6W 4A8, Canada |
|---------------|------------|--------------|---|
| Req'd:        | CNC:       | Description: |   |
| _             |            | AS-1         | 1 Windshield Parts Breakdown  |
| Drawn By:     | Date:      | Units:       | File Name:  |
| Daryl Furkalo | 2012-09-20 | Imp.         | KUB2320-ASM-15  |
| Checked By:   | Date:      | Size:        |   |
|               |            | В            |   |